


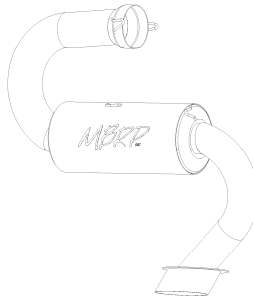

MBRP Muffler Installation Instructions

4090210	2000-2001 500-600-700 XC-RMK (GEN II CHASSIS) '99 500 XC
4100210	00-01 800 RMK (GEN II CHASSIS)
4110210/4115210	2001-06 500-600-700 XC / RMK/ PRO-X (EDGE CHASIS)
4050210/4055210	2001-06 800 XC/RMK /PRO X (EDGE CHASSIS)

1. Remove springs fastening stock muffler to frame and exhaust pipe. (Set springs safely aside so they can be reused)
2. Remove stock muffler.
3. Install MBRP muffler, placing its outlet through the stock exit in the belly pan.
4. Using stock springs, fasten the MBRP muffler using tabs on inlet pipe and muffler body.
5. Tie back all hoses that might rub on the MBRP muffler.



NOTE: To avoid exhaust leaks use high heat silicone to seal all connections between expansion chambers and muffler. Monitor for leaks during the first 200 miles after your installation and re-apply silicone where necessary. We suggest having your local snowmobile mechanic or performance shop install this product.

CAUTION: **DO NOT** touch muffler while snowmobile is running or shortly after it has run, as it may result in personal injury.

MBRP Inc warranty applies for a one (1) year period from the date of purchase to defects in product material and workmanship and is to the original purchaser on record and for the original vehicle for which it was designed and installed. This warranty is limited, at MBRP Inc.'s sole determination, to the repair or replacement of defective product only and does not include the cost of removal or re-installation, damage by accident, abuse, misuse or misapplication or any consequential damages however they may arise. Determination of warranty coverage shall be at the discretion of an authorized MBRP Inc quality engineer.